

# VERUS ENGINEERING

## Hood Scoop Block-Off Kit – GR/GV WRX and STI Install Manual



Author: Eric Hazen

Release Date: 2020/08/18

Approvals: E. Hazen, C. Warner

### Document Revisions

Rev	Date	Author	Description
01	2020/08/18	E. Hazen	Initial release of install manual

## Hood Scoop Block-Off for GR GV WRX and STI – Install Manual

# CONTENTS

1. Introduction.....	<3>
1.1. Overview.....	<3>
1.2. Difficult .....	<3>
1.3. Time Required.....	<3>
1.4. Tools Needed .....	<3>
1.5. Hood Scoop Block-Off Components.....	<3-4>
2. Hood Scoop Block-Off Install.....	<4-7>

---

## Hood Scoop Block-Off for GR GV WRX and STI – Install Manual

### 1. Introduction

**1.1. Overview:** Detailed instructions on installing the hood scoop block-off on the GR/GV Subaru WRX and STI models.

**1.2. Difficulty:** Easy

**1.3. Time Required:** 0.5 hour

**1.4. Tools Needed:**

- 1.4.1. 8mm Socket
- 1.4.2. Flat Head Screwdriver
- 1.4.3. Ratchet
- 1.4.4. 2.5mm Allen Wrench
- 1.4.5. Small Screwdriver



### 1.5. Hood Scoop Block-Off Components

1.5.1. Hood Scoop Block-Off


1.5.2. Hardware Bag

- 1.5.2.1. (3) M4 x 0.7 Clip On Nuts
- 1.5.2.2. (4) M4 x 0.7 BHCS (Button Head Cap Screw) x 12mm Long, Stainless
- 1.5.2.3. (4) M4 Fender Washer, Stainless

## Hood Scoop Block-Off for GR GV WRX and STI – Install Manual

**2. GR/GV Subaru WRX/STI Hood Scoop Block-Off Install**

- 2.1. Verus Engineering is not responsible for damage to you or your vehicle by following this manual and/or installing Verus Engineering products.
- 2.2. We begin by gaining access to the bottom of the hood by popping and lifting the hood.
- 2.3. We need to remove the hood scoop itself for this install; so we'll need to remove the plastic push pin rivets using the flat head screwdriver. These are located below.

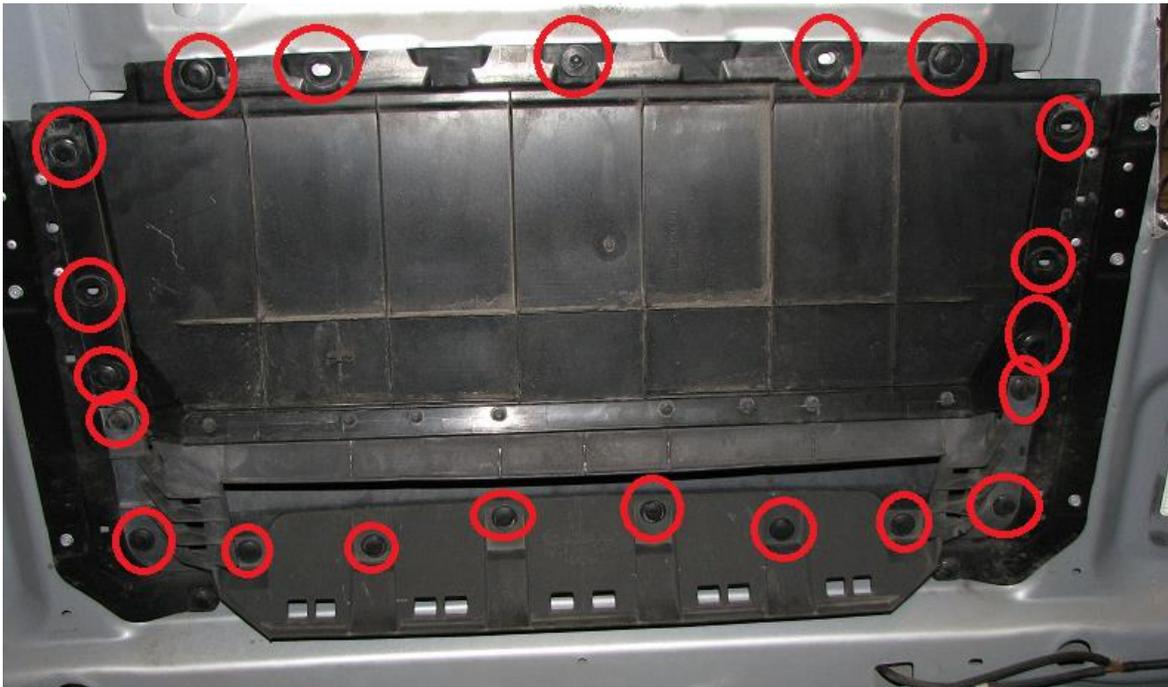

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

## Hood Scoop Block-Off for GR GV WRX and STI – Install Manual

- 2.4. You can remove the black steel part of the hood as well by removing the 8mm bolts (circled in blue) and the plastic rivets (circled in yellow). **We did not remove this in our install but it can be removed!**



- 2.5. Now we can install the (3) push clips onto the hood. The locations are circled below in green.



- 2.6. Install the M4 push-clips as shown below. Simply push them on.



## Hood Scoop Block-Off for GR GV WRX and STI – Install Manual



- 2.7. We can now install the hood scoop block-off. The (3) tabs on the top of the block-off go between the plastic hood scoop piece and the hood (yellow arrows). The (3) holes on the bottom of the plate bolt to the push-clips we installed in 2.6.



- 2.8. Press the block-off towards the opening (red arrows) and then fully tighten the M4 BHCS (yellow circles).

## Hood Scoop Block-Off for GR GV WRX and STI – Install Manual



**2.9.** Congratulations on installing the Verus Engineering Hood Scoop Block-Off Kit for the GR/GV WRX and STI.

**2.10.** Please send any questions, comments, concerns, or photos to Verus Engineering via e-mail; [sales@verus-engineering.com](mailto:sales@verus-engineering.com).



Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.