

Verus GT3 Wing Riser Install Guide



Prep: Work on the car in a closed environment. You will need:

- Socket Wrench
- T40 Socket
- 5mm HEX
- Microfiber
- Plastic Pick

Step 1: Open the trunk and disconnect the 3rd brake light cable.



Step 2: Remove the four (4) rubber gromets on the inside of the spoiler. You can use a plastic pick to remove the gromets. Be careful not to damage the paint. Then, remove the hardware holding the spoiler in place using a T40 socket.



Step 3: Carefully remove the spoiler. Make sure the brake light cable is clear from being caught inside the spoiler.




Step 4: Install the wing risers. Use a microfiber to clean the surface. Use a 5mm HEX to install the new hardware provided. **NOTE:** Leave the hardware slightly loose. **Do not tighten the bolts down all the way!**





Step 5: Place the wing on the risers. Make sure to feed the brake light cable all the way through so the spoiler can seat properly.



Step 6: Using the 5mm HEX, install the hardware on the front of the spoiler first. **NOTE:** Leave the hardware slightly loose. **Do not tighten the bolts down all the way!**

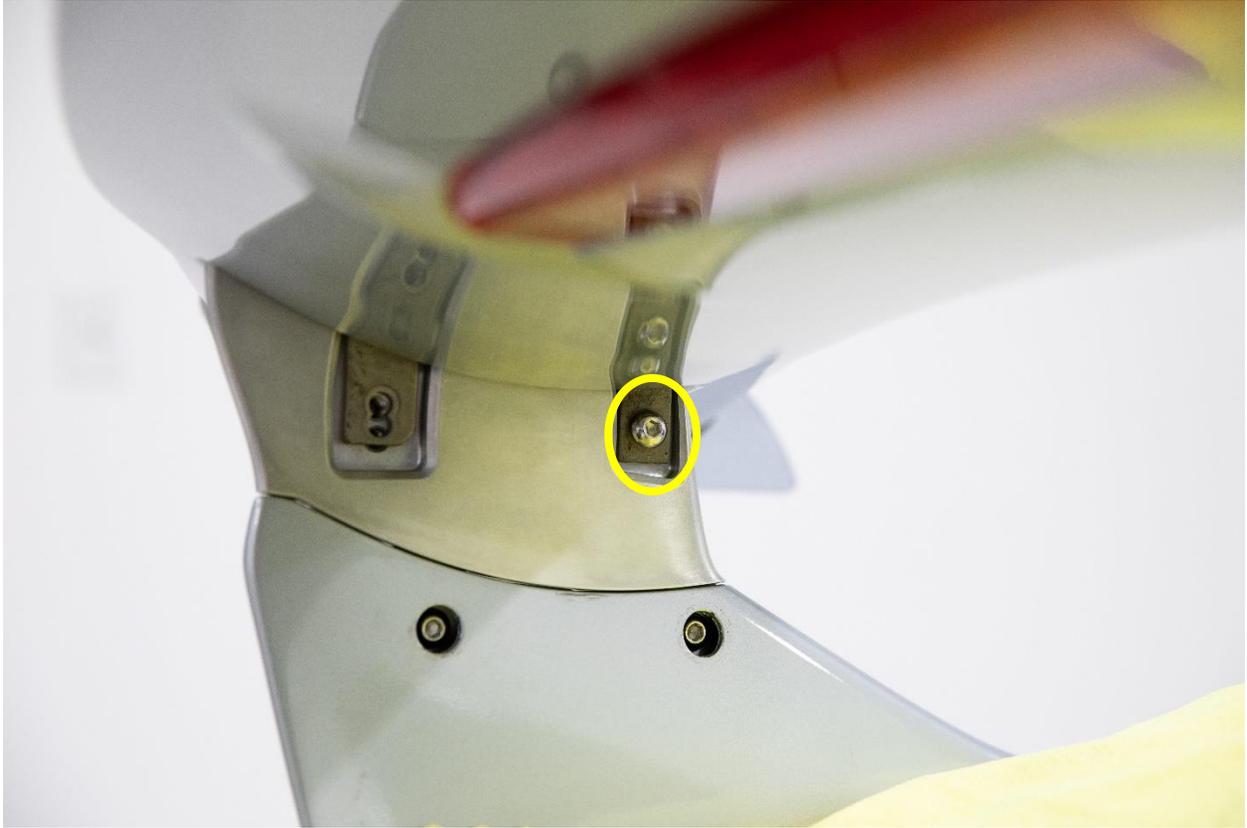

Step 7: Adjust the spoiler to your desired height. Make sure to properly align each side of the spoiler.

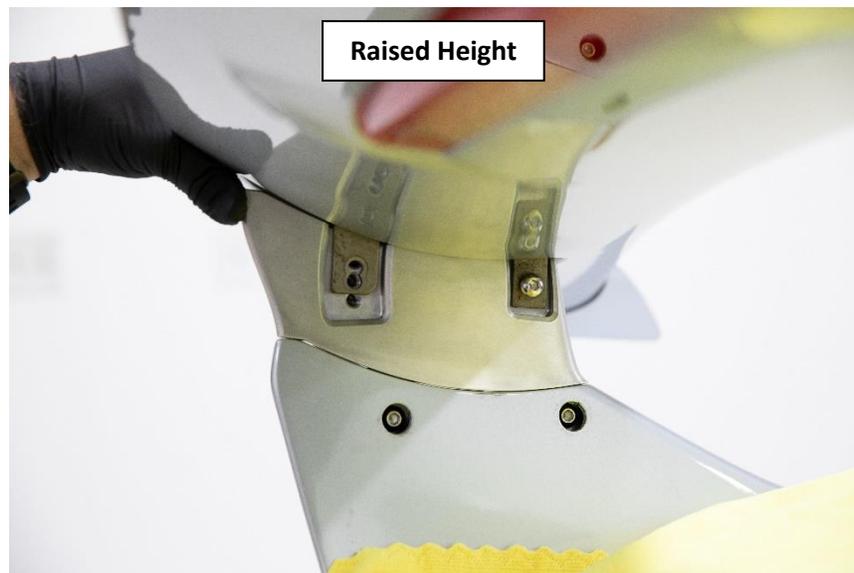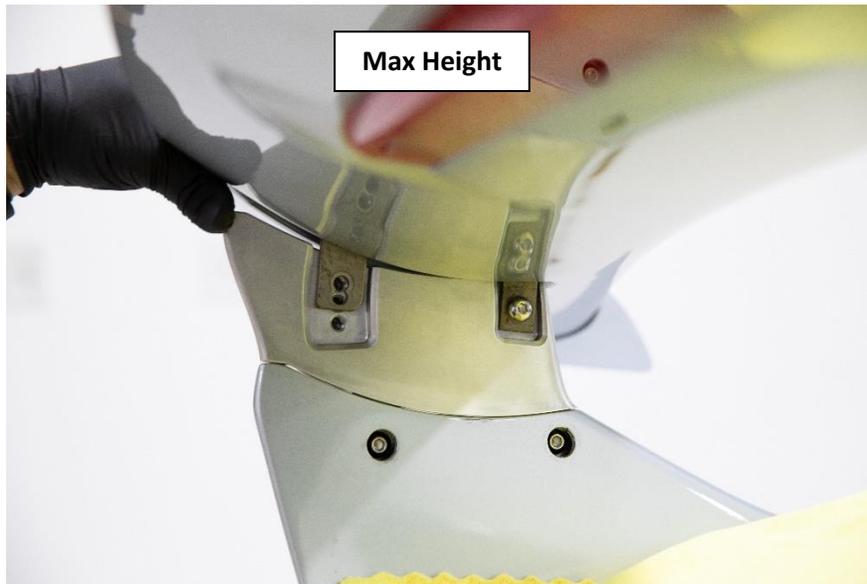

Finish: Make sure to tighten all hardware and re-connect the 3rd taillight brake cable.

