




Side Splitter Kit - G82 BMW M4

Install Manual

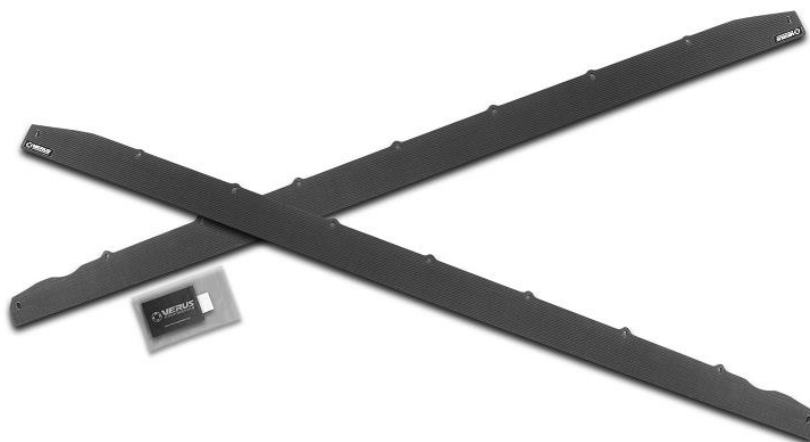

Author: M. Deckard
Release Date: 2025/07/30
Approvals: E. Hazen

Document Revisions

Rev	Date	Author	Description
01	2025/07/30	M. Deckard	Initial release of install manual

Side Splitter Kit, G82 BMW M4 – Install Manual**Contents**

Introduction	3
Overview	3
Difficulty.....	3
Time Required.....	3
Tools Recommended	3
Side Splitter Kit Components	3
Side Splitter Kit Install	4

Side Splitter Kit, G82 BMW M4 – Install Manual

Introduction

Overview: Detailed instructions on installing the Verus Engineering Side Splitter Kit on the G82 BMW M4.

Difficulty: Moderate

Time Required: 0.5-1 hour

Tools Recommended:

- 4mm Allen key or socket
- Ratchet or impact
- 1/4" drill bit
- Drill
- Punch (optional)
- Trim tool (optional)
- Hammer (optional)



Side Splitter Kit Components

- (1) Left-hand Side Splitter

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

Side Splitter Kit, G82 BMW M4 – Install Manual

- (1) Right-hand Side Splitter
- (1) Hardware bag
 - (18) M6x1.0 20mm Long, Button Head Cap Screw (BHCS), Stainless Steel (SS)
 - (18) M6 Fender Washer, SS
 - (18) M6 Clip-on Nuts



Side Splitter Kit Install

1. Verus Engineering is not responsible for damage to you or your vehicle by following this manual and/or installing Verus Engineering products. Please seek professional service/guidance if you are uncomfortable/incapable of installing this in a safe manner. Contact us at support@verus-engineering.com if you have any questions/concerns.
2. We first need to safely raise and support the vehicle using a jack and jackstands or a lift if one is available. **Note: You will need access to the underside of the side skirts so lift your vehicle accordingly.**
3. Locate the plastic rivets that fasten the lower edge of the side skirts (9 per side).




4. Drill out the center of the plastic rivets or use a punch to drive the center section through and use a trim tool to pull the remains of the clips out.


Side Splitter Kit, G82 BMW M4 – Install Manual



5. Install the clip-on nuts where the plastic rivets used to be. The clip-on nuts should clip onto both layers of the side skirt assembly as shown below

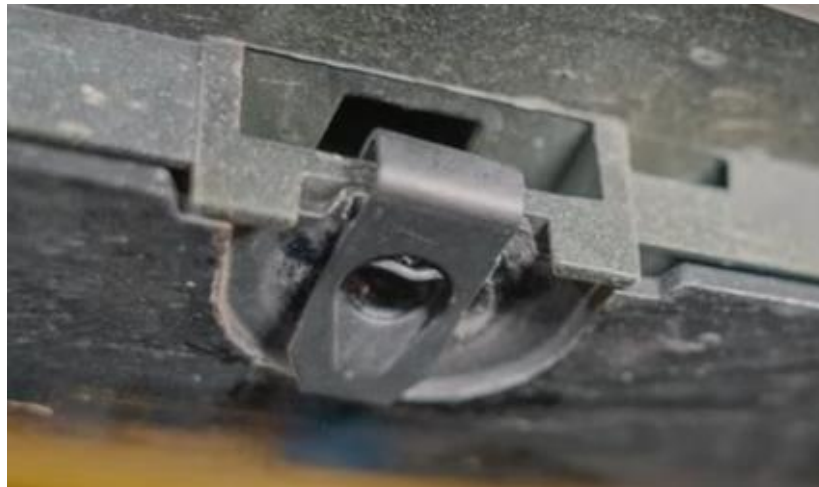


6. Choose which side of the side splitter you would like to face up. The side splitters can be installed with the Verus logo facing up or down.

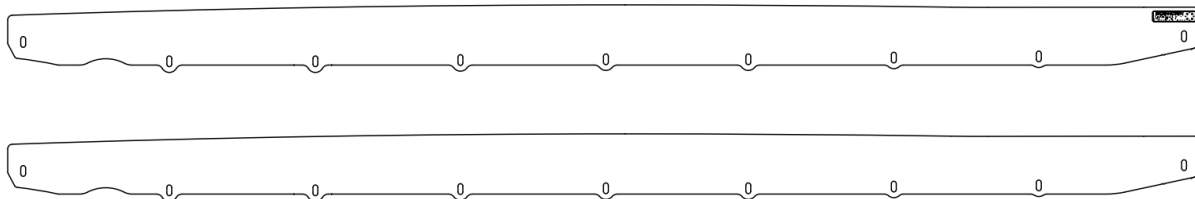

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

Side Splitter Kit, G82 BMW M4 – Install Manual

7. Install the side splitter to the car using the M6 20mm long BHCS with M6 washers.

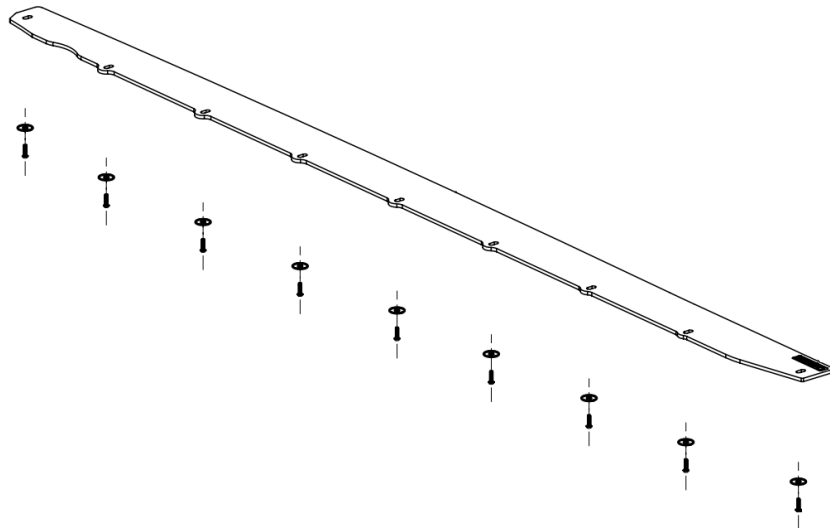

8. Repeat **Step 4-7** for the remaining side.
9. Congratulations! You have just completed installation of the Verus Engineering Side Splitters on your G82 BMW M4!
10. Please contact Verus Engineering with any questions, comments, concerns, and feedback via support@verus-engineering.com.



Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.