

VERUS ENGINEERING

VA Chassis WRX Two Piece Front Splitter

Install Manual



Author: Eric Hazen

Release Date: 2017/01/26

Approvals: E. Hazen, P. Lucas

Document Revisions

Rev	Date	Author	Description
01	2017/01/26	E.Hazen	Initial release of install manual
02	2017/08/08	P. Lucas	Company name change from Velox to Verus

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

CONTENTS

1. Introduction	<3>
1.1. Overview	<3>
1.2. Difficult	<3>
1.3. Time Required	<3>
1.4. Tools Needed	<3>
1.5. Splitter Components	<3-4>
2. Front Splitter Prep	<5>
3. Front Splitter Install	<5-12>
4. Support Rod Install	<12-22>

VA Chassis WRX Two Piece Front Splitter – Install Manual

1. Introduction

1.1. Overview: Detailed instructions on installing the Two Piece Front Splitter and Support Rod Kit for the VA chassis WRX and STI.

1.2. Difficulty: Beginner to Moderate

1.3. Time Required: 3-4.5 hours, depending on support rod kit

1.4. Tools Needed:

1.4.1. Splitter Install

- 1.4.1.1. Jack and Jack Stands
- 1.4.1.2. Screwdriver
- 1.4.1.3. 10mm Socket
- 1.4.1.4. 12mm Socket
- 1.4.1.5. Ratchet
- 1.4.1.6. 4mm Allen Wrench
- 1.4.1.7. 5mm Allen Wrench
- 1.4.1.8. 9/16" wrench

1.4.2. Splitter Rod Kit

- 1.4.2.1. Drill
- 1.4.2.2. Tape Measure
- 1.4.2.3. Center Punch
- 1.4.2.4. Starter Drill Bit or Pilot Sized Drill bit (1/8")
- 1.4.2.5. 1/4" Drill Bit
- 1.4.2.6. Dremel with small cut-off wheel
- 1.4.2.7. Touch up paint (optional)

1.5. Splitter Components

- 1.5.1. Two Piece Splitter
- 1.5.2. (2) Splitter Rod Assemblies
- 1.5.3. (4) Clevis Mounts
- 1.5.4. (1) Large Support Brace
- 1.5.5. (1) Small, Two Piece Brace
- 1.5.6. Hardware Bag
 - 1.5.6.1. (6) M6 x 1.0 SS BHCS, 35mm Length
 - 1.5.6.2. (3) M6 x 1.0 SS BHCS, 45mm Length
 - 1.5.6.3. (2) M8 x 1.25 SS BHCS, 70mm Length
 - 1.5.6.4. (2) M8 SS Washer
 - 1.5.6.5. (9) M6 x 18mm SS Washers
 - 1.5.6.6. (9) M6 x 38mm SS Washers
 - 1.5.6.7. (9) M6 x 1.0 Plastic Rivet Nut
 - 1.5.6.8. (9) Rivet Nut Backing Washer
 - 1.5.6.9. (5) M6 Nylon Spacer, 5mm Length

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual

- 1.5.6.10. (3) M6 Nylon Spacer, 10mm Length
- 1.5.6.11. (2) M8 Nylon Spacer, 40mm Length
- 1.5.6.12. (1) Rivet Nut Install Tool
- 1.5.6.13. (3) M6 x 1.0 SS BHCS, 25mm Length
- 1.5.6.14. (3) M6 x 1.0 SS Flanged Nut
- 1.5.6.15. (6) M6 x 18mm SS Washer
- 1.5.6.16. (2) M6 x 1.0 SS BHCS, 12mm Length
- 1.5.6.17. (6) M6 x 1.0 SS BHCS, 25mm Length
- 1.5.6.18. (4) M6 x 12mm SS Washer
- 1.5.6.19. (4) M6 x 1.0 SS Flanged Nut




Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual

2. Front Splitter Prep

- 2.1. Velox is not responsible for damage to you or your vehicle by following this manual and/or installing Verus Engineering products.
- 2.2. We begin by working on the splitter off car, to make two pieces into one.
- 2.3. Grab the splitter halves and the splitter support bracket.
- 2.4. At this point, we need to decide which side of the splitter will face upward when installed. Whichever side you want facing upward, we will install the bracket on the same side.

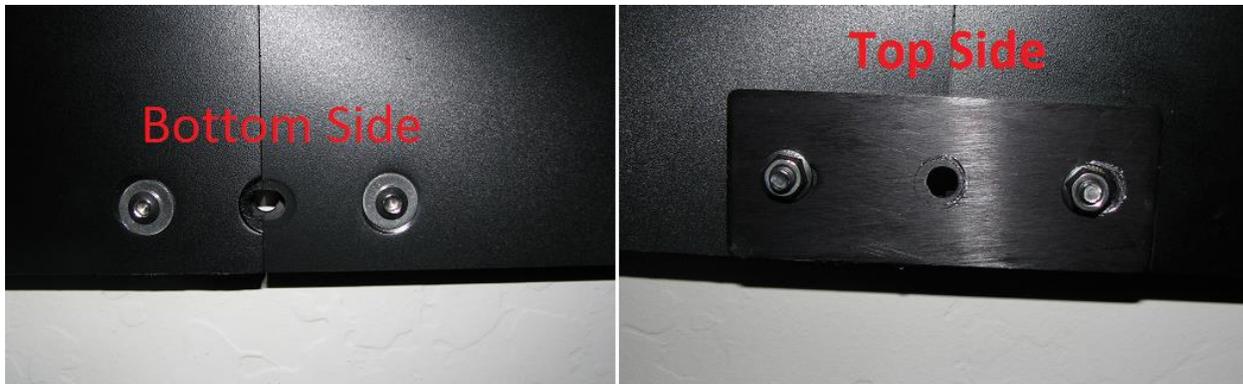


- 2.5. As shown above, install the bracket with the nuts on the top side of the splitter. On the bottom side, use the M6 x 18mm diameter washers and the M6 x 1.0 BHCS that are 25mm long.
- 2.6. Once fully tightened, the splitter is ready for install. It is a bit weak right now though, so try to be careful with where the two halves are fastened together right now.

3. Front Splitter Install

- 3.1. We begin by jacking the car up. You'll want to choke the rear wheels and use the e-brake.
- 3.2. Place a jack stand on either side of the car, you can use the frame rails or the pinch welds.
- 3.3. With the front of the car off the ground, we'll want to start by removing the underbody plastic piece. This piece is quite large and has multiple plastic push rivets and a few bolts holding it on. Be sure to follow it into the fender to fully remove the component.

VA Chassis WRX Two Piece Front Splitter – Install Manual

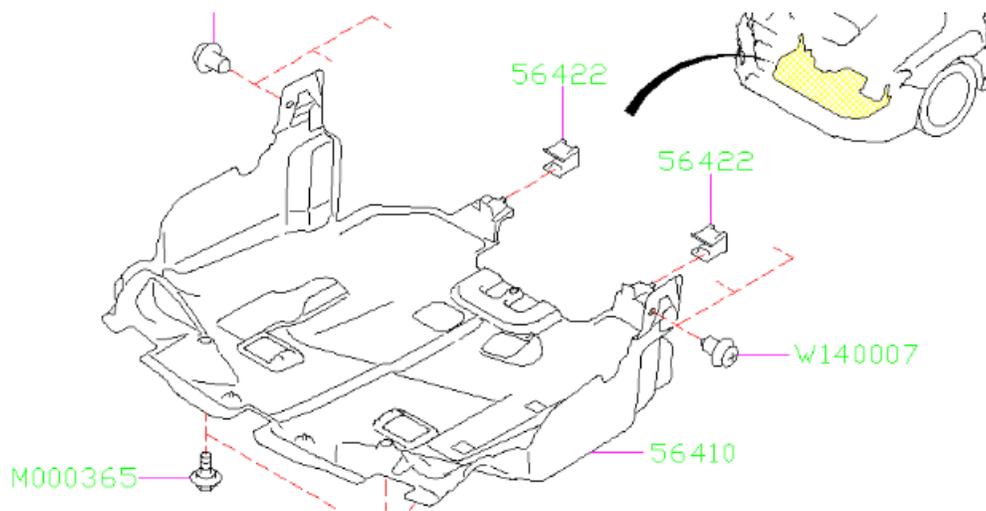


3.4. Below is a picture with this piece removed from the car.



3.5. You will now have access to the holes that need the rivet nuts installed into them. These middle (3) units are circled in red below.

VA Chassis WRX Two Piece Front Splitter – Install Manual

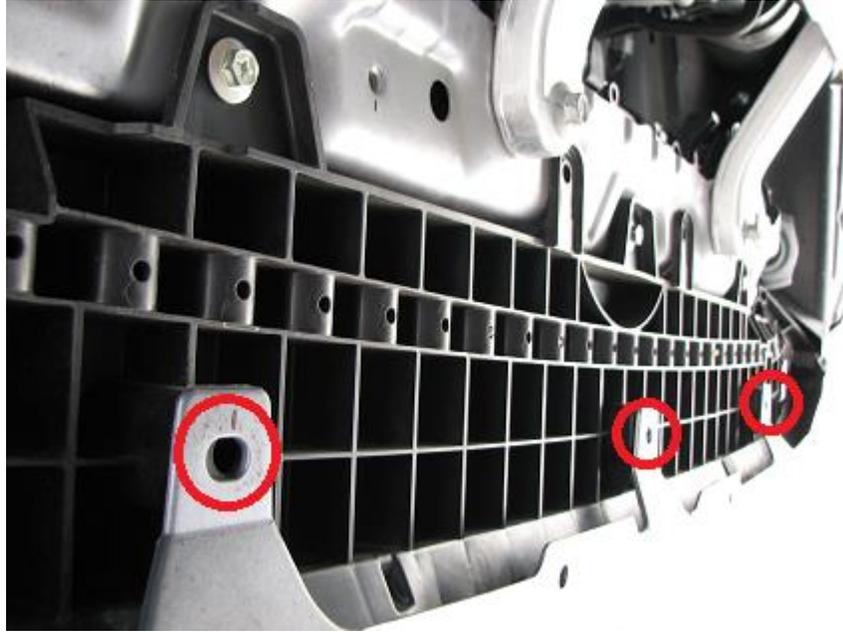

- 3.6. Moving outward, the outside three holes that need a rivet nut installed are circled in yellow below.



- 3.7. To properly install the rivet nut, you'll want to thread the rivet nut onto the tool as shown below.

VA Chassis WRX Two Piece Front Splitter – Install Manual



- 3.8.** Place the rivet nut into the hole. If you'd like to use the rivet nut backing washer, you'll need access to the top side of the material you are riveting onto. Note, the backing washer is not necessary but will decrease the chance that the rivet gets pulled through the bumper.




- 3.9.** You'll want to **only rivet the base material**, which means on the front (3) holes, you'll want to move the bumper tabs out of the way, and the plastic shield away on the outside holes.



Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual

- 3.10.** Using the 9/16" wrench and the 5mm allen wrench, hold the nut steady and tighten the allen bolt. You'll have some initial resistance, then the rivet nut will begin to pull tighter on the material.
- 3.11.** Below are pictures of a properly installed rivet nut. We did not use the backing washers here though feel free to if you would like, they are supplied with each kit.

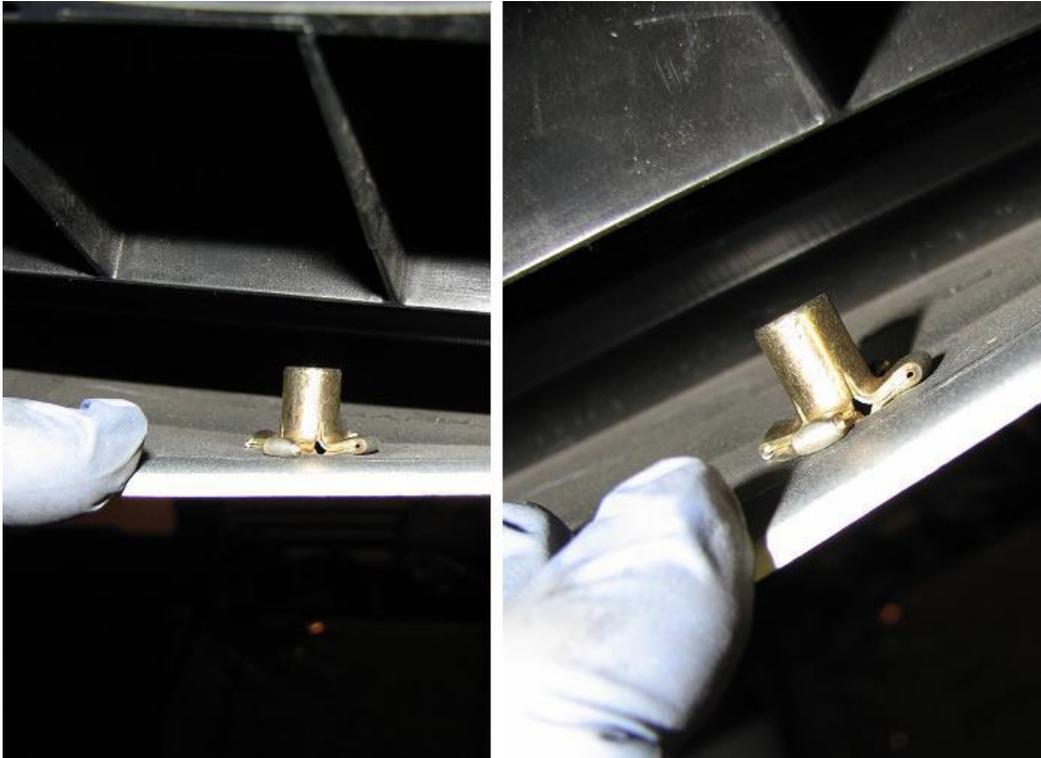

- 3.12.** Below is a photo of the outside three rivet nuts installed on the car. Note how the rivet nut is above the black plastic shield.




Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual

- 3.13.** Below is a photo of the middle three rivet nuts installed on the car. Note how the rivet nuts are above the bumper tabs.



- 3.14.** If you are installing the splitter rod kit as well, skip to step 3 at this time. This is highly recommended with the two-piece splitter and is included automatically as a result.
- 3.15.** We begin reassembling the car with the large plastic underbody shield with all the plastic rivets.
- 3.16.** Leave the front (3) 10mm hex head bolts (circled in blue below) and the (2) 12mm hex head bolts (circled in green below) out of the plastic shield, we will use supplied hardware for these spots.

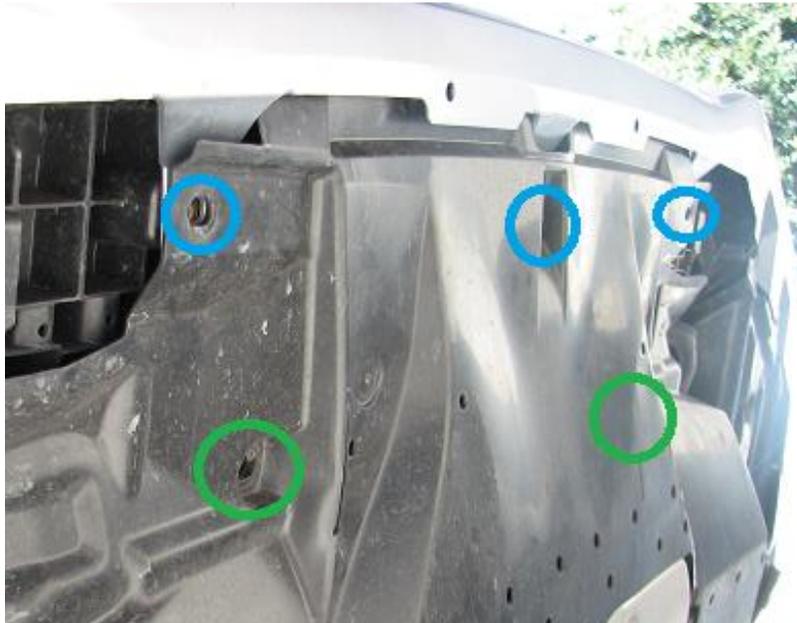


Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual

- 3.17.** It's time to install the splitter now. You'll want to install all the bolts loosely first, **by hand!** The rear (4) bolts are M6 x 1.0 x 35mm long are installed without any spacers (**circled in red in red**). The rear two middle bolts are the M8 x 1.25 x 70mm long bolts, they need the 40mm nylon spacers installed between the splitter and the chassis (**circled in blue**).




- 3.18.** The next bolts to be installed are the front five units, which all need spacers/washers installed above them to be installed perfectly flat. Typically the two units circled in green, which are M6 x 1.0 x 35mm long, use the 5mm spacer above the splitter (**circled in green**). **Hint: To slide the spacers in, pull down on the splitter and slide the spacer between the splitter and the car.**

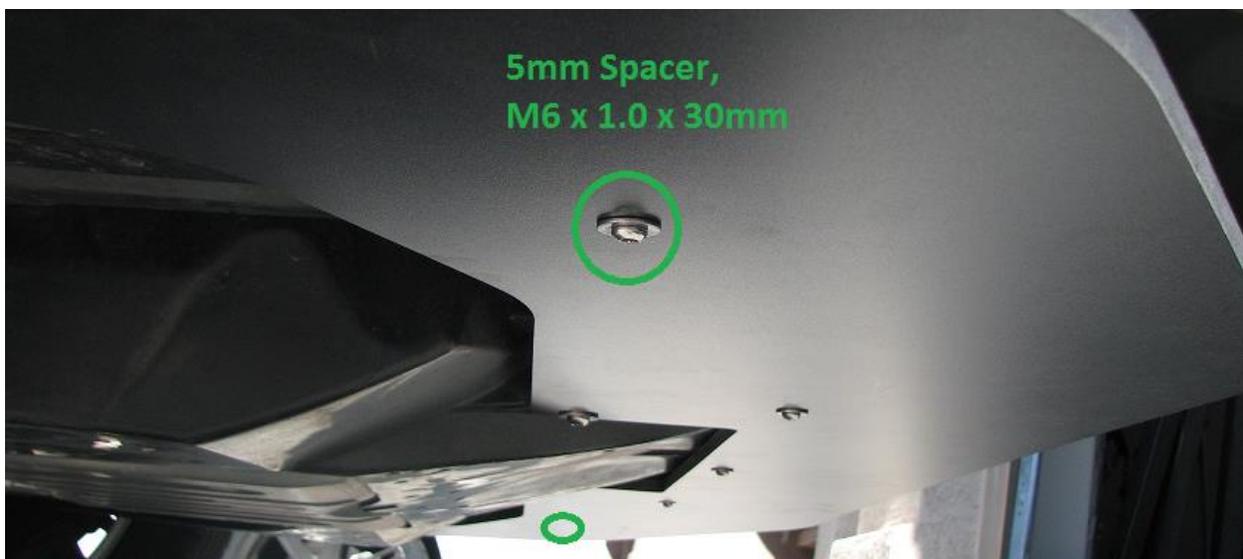

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual

- 3.19.** The front most three units (circled in yellow) receive the longer M6 x 1.0 bolts, which are 45mm in length. These three holes receive between 5 and 10mm of spacers typically. Use the extra provided washers to achieve thicknesses between 5 and 10 mm.

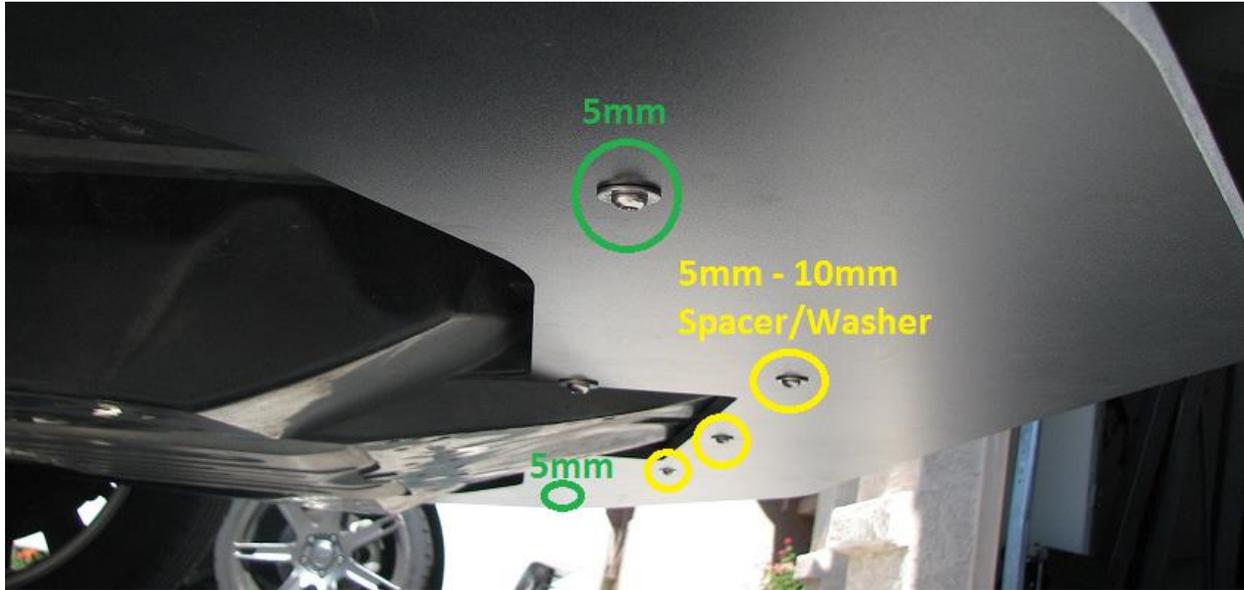

- 3.20.** With all the bolts loosely installed with the correct spacers, we can tighten all 11 of these bolts. **Note that on the images above, the washers have been updated to larger 38mm diameter units for more support**
- 3.21.** *If the splitter does not sit perfectly flat, adjust the spacers/washers until the splitter sits completely flat.*
- 3.22.** If you are installed just the splitter, you have completed the install! Enjoy an increase in front end downforce and an aggressive new look to your WRX. *If you are adding the front splitter support rods, which are suggested when the car is used at speeds above 100MPH, you can move to step 3!*
- 3.23.** Please contact Verus Engineering with any questions, comments, concerns, and/or feedback via sales@verus-engineering.com.

4. Front Splitter Support Rod Installation

- 4.1.** We assume you are beginning the install at step 2.14, with all the rivet nuts installed but the splitter still off the car.
- 4.2.** We have to remove the bumper for this part of the install.


Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual

- 4.3.** Moving to the front of the fenders, we need to remove the plastic pop rivet located there (one on each side). This is shown below circled in red. Push the center in, then pull the rivet out.



- 4.4.** Moving to the top of the bumper, we need to remove the plastic rivets here as well, and the 10mm bolts scattered throughout. The 10mm are circled in yellow. The plastic rivets are circled in blue.

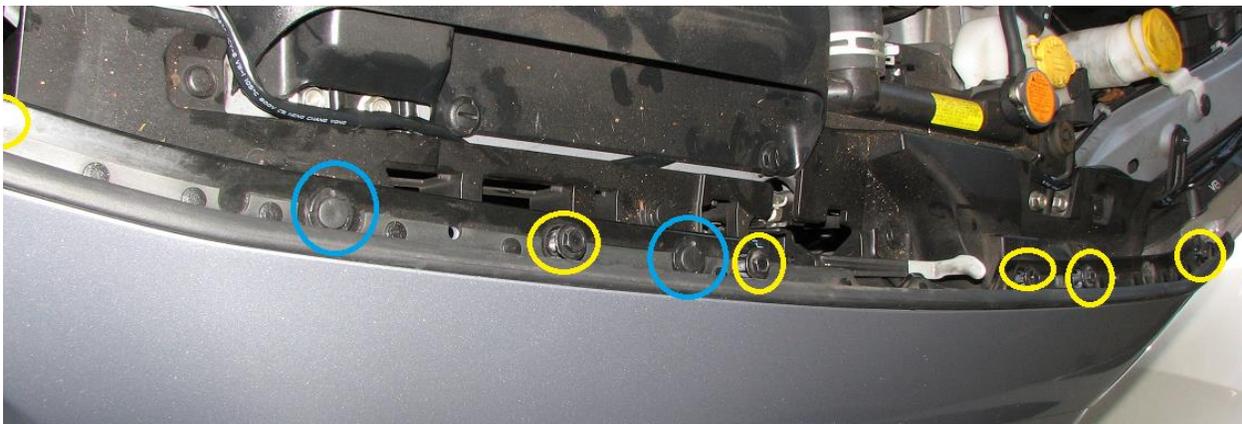

- 4.5.** At this point, the bumper should be ready to come off. Starting at the front of the fender, pull the front bumper outward and slightly forward. It will require a tad bit of force to remove from the headlight surround tabs. Do this to both sides of the bumpers.
- 4.6.** From the top, pull up slightly and forward, the bumper should come off the car at this point. If not, re-check to see if there are any bolts/rivets holding it on still and remove them.

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.


VA Chassis WRX Two Piece Front Splitter – Install Manual

- 4.7. We now have access to the crash beam, which is where the support rods mount to. The crash beam is shown below.



- 4.8. Using a tape measure, measure ~2" from the center strengthening rib on the crash beam (see below picture for a representation of this). Make a mark with a pencil or marker (circled in red). **Note: This should be in between the spot rivets, marked with yellow arrows in the below picture as well.**

VA Chassis WRX Two Piece Front Splitter – Install Manual

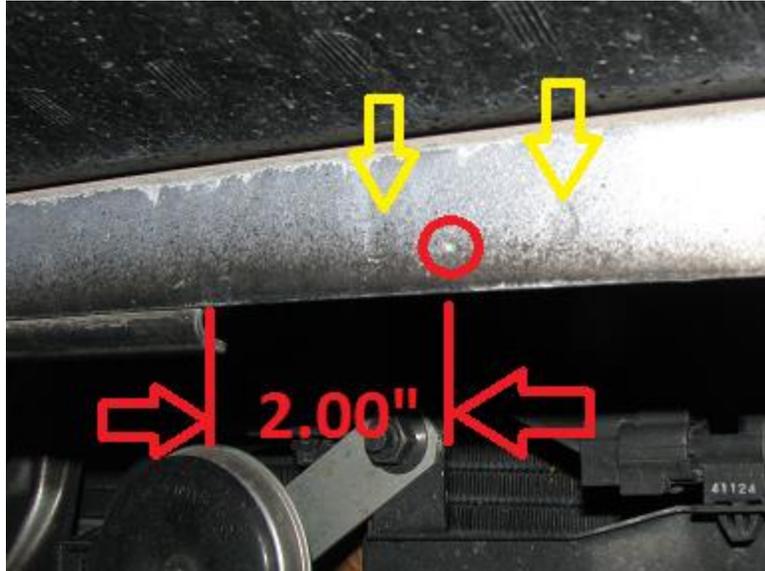

- 4.9.** Using a center punch and a hammer, create a center punched hole in the sheet metal so the drill bit does not wander.




- 4.10.** Using a starter drill bit or a pilot sized drill (1/8"), drill the center punched hole out. Using the 1/4" drill bit, increase the size of this hole to 1/4" as shown below.

VA Chassis WRX Two Piece Front Splitter – Install Manual



- 4.11.** Using the tape measure, the hole to hole spacing should be ~20.0" as shown below. Using the same procedure (center punch, pilot hole, 1/4" hole), drill this hole out as shown below as well. **Once again note, the hole is drilled between the two spot welds (blue arrows), this is important as drilling through a spot weld is difficult.**

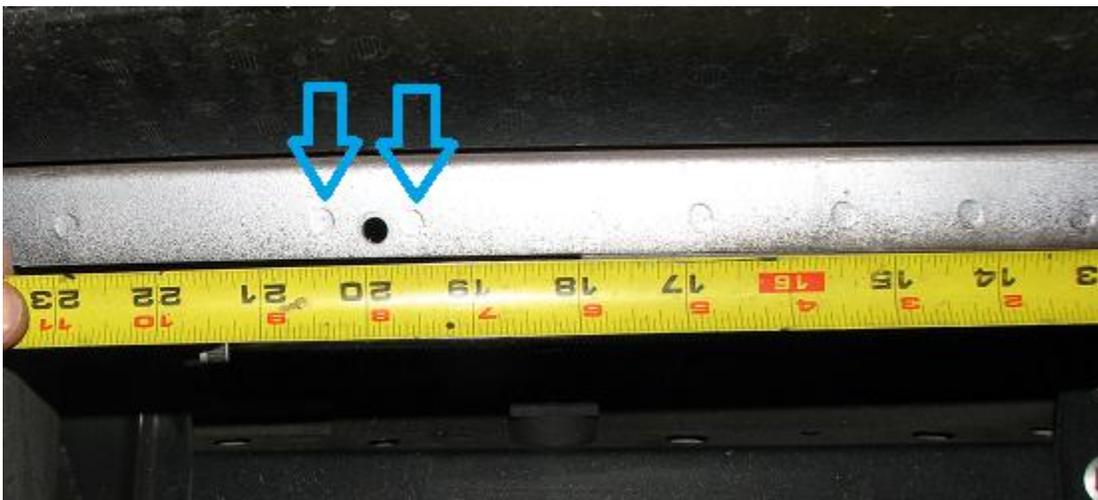

- 4.12.** Using the 16mm long button head cap screw and a washer, bolt the clevis onto the crash beam. Do not fully tighten the clevis.

VA Chassis WRX Two Piece Front Splitter – Install Manual



- 4.13.** Remove the grill from the front bumper by working your way around the grille and pulling the tabs. The grill removes rearward of the front bumper.
- 4.14.** Place the front bumper back on the car, you can fasten it back onto the car as the bumper should not need removed again.
- 4.15.** We are able to remove and install the grill quickly by placing it through the grill opening and then pulling it forward toward the front of the car. The other option is to remove more of the underbody plastic; but we suggest the above method.



- 4.16.** Hold the grill up to the opening and figure out what locations need cut out. Start small as you can always take off more material, but you cannot put material back.
- 4.17.** Using the Dremel and a small cut off wheel, slowly begin removing material while test fitting as often as possible. To reinstall the grill, go up from below the bumper and gently press the grill into place. Below is a picture of a properly cut grill off car. This is roughly what yours should look like when done properly.

VA Chassis WRX Two Piece Front Splitter – Install Manual



- 4.18.** Shown below are more photos of the grill installed during test fitting of the splitter support rod system. Attempt to keep material removed to a minimum.



Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual



- 4.19.** Before final install of the grill, we will want to fully tighten the clevis and the rod end into the clevis. Tighten the clevis into the crash beam with the 4mm allen wrench so that the ears are vertical.
- 4.20.** Using the 4 allen wrench and the 10mm wrench, tighten the rod end into the clevis, a washer is used between the bolt and the clevis and the flanged nut goes on the other side. Use the 25mm long bolt and the flanged nut on the other side.



Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

VA Chassis WRX Two Piece Front Splitter – Install Manual

- 4.21. Install the support rod onto the rod end. Keep in mind the support rod is both left hand and right hand thread and need used with that respective rod end. This does not need to be tightened at this time.
- 4.22. Re-install the grill into the bumper by pulling forward on the grill and holding the bumper still.
- 4.23. Go back to step 2.15 and follow the instructions until the splitter is fully installed.
- 4.24. With the splitter fully installed, we can make the holes for the support bracket to bolt to.
- 4.25. Place the lower aluminum plate underneath the splitter, roughly centered, and mark the center of the two slots as shown below.



- 4.26. Center punch this mark then drill straight through this mark with a 1/4" drill bit. This is how we will mount the bottom of the support rod to the splitter.
- 4.27. Using the 25mm long M6 BHCS and the large fender washer from the bottom side, bolt through the support bracket, splitter, and capture the clevis to the top side of the splitter.

VA Chassis WRX Two Piece Front Splitter – Install Manual



- 4.28.** Ensure that the splitter is near horizontal by using a level. The front of the splitter's level is now controlled by the support rod system. Lengthen it to lower the front of the splitter, shorten it to raise the front of the splitter.
- 4.29.** At this point, everything should be installed on the car and can be fully tightened. Ensure all bolts and nuts are tightened on the underside of the splitter and the support rods are fully tightened as well.
- 4.30.** On the support rods themselves, hold the support rod and then tighten the nut on each end to keep the support rod from turning.
- 4.31.** We have now concluded the install of both systems, admire your hard work! The splitter can see over 200 lbs of downforce at this point. ***It is not wise to stand on the splitter, it can handle this load but the aluminum bracket beneath can bend and lead to distortion.***

VA Chassis WRX Two Piece Front Splitter – Install Manual



4.32. Please contact Verus Engineering with any questions, comments, concerns, and feedback via sales@verus-engineering.com.

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.